คู่มือการใช้งาน

Seagull®

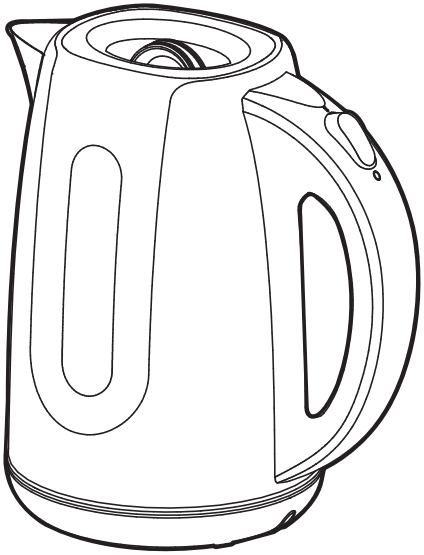

กาน้ำไฟฟ้า

Electric Kettle

กาน้ำไฟฟ้า ถูกออกแบบให้ง่ายต่อการใช้งาน สะดวกรวดเร็วในการต้มน้ำ ช่วยให้การต้มน้ำเป็นเรื่องง่ายสำหรับครอบครัวยุคใหม่เช่นคุณ

รหัสสินค้า	ชื่อสินค้า	กำลังไฟฟ้า (วัตต์)	แรงดันไฟฟ้า (โวลต์)	ขนาดของกาน้ำ กว้างxยาวxสูง(ซม.)
150 000-6-47	กาน้ำไฟฟ้า 1.0 ลิตร	1,370 - 1,630	220 - 240	14 x 20 x 21
150 000-6-69	กาน้ำไฟฟ้า 1.2 ลิตร (กาน้ำไฟฟ้าพลาสติก)	900 - 1,100	220 - 240	14.5 x 19 x 21
150 000-6-22	กาน้ำไฟฟ้า 1.7 ลิตร	1,850 - 2,200	220 - 240	15 x 22 x 23

คุณสมบัติพิเศษ

- รวดเร็ว ใช้เวลาประมาณ 3-4 นาทีในการต้มน้ำเดือด
- ใช้งานง่าย สะดวก แค่กดสวิทซ์เพียงปุ่มเดียวและเมื่อน้ำเดือดเครื่องจะตัดการทำงาน
- โครงสร้างตัวกาน้ำ เป็นสเตนเลสสตีล สวยงาม ทนทาน นำไปใช้งาน เช็ดทำความสะอาดง่าย ปลอดภัยสำหรับการต้มน้ำดื่ม (สำหรับกาน้ำ 1.0 และ 1.7 ลิตร)
- กาน้ำไฟฟ้า 1.2 ลิตร ทำจากพลาสติกประเภท POLYPROPYLENE มีประสิทธิภาพในการทนความร้อน จึงปลอดภัยสำหรับการต้มน้ำ
- สายไฟยาว 68 ซม. และสามารถม้วนเก็บได้ สะดวกต่อการใช้งานและจัดเก็บ
- มองเห็นระดับน้ำได้อย่างชัดเจน และ ระหว่างต้มน้ำจะมีไฟ LED ช่วยแสดงระดับน้ำ(สำหรับกาน้ำ 1.0 และ 1.7 ลิตร)
- ก้นกาน้ำไม่ร้อนหลังต้มน้ำเดือด จึงปลอดภัยในการเคลื่อนย้าย
- ฮีทเตอร์อยู่ด้านล่างของกาน้ำ ทำให้ล้างทำความสะอาดง่าย ปลอดภัยต่อการใช้งาน
- ด้ามจับกระชับ ถนัดมือ และผลิตจากเบกาไลท์ จับได้ไม่ร้อนแม้ในขณะต้ม (สำหรับกาน้ำ 1.0 และ 1.7 ลิตร)
- ฝากาน้ำ ปิดแน่นสนิท ปลอดภัยระหว่างต้มน้ำ
- จุกฝากาน้ำเปิดง่าย

ก่อนการใช้งาน

- ก่อนการใช้งานครั้งแรก ควรต้มน้ำเดือดก่อนสองครั้งแรก เพื่อล้างทำความสะอาดภายในกาน้ำ

วิธีการใช้งาน

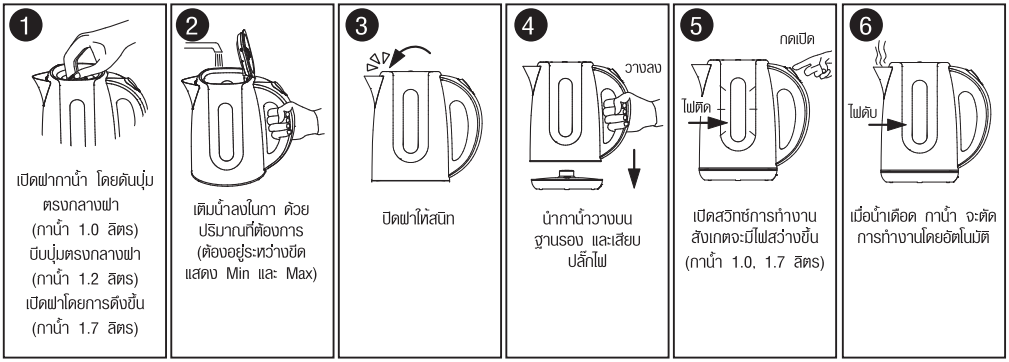

1. เปิดฝากาน้ำ โดยดันปุ่มตรงกลางฝา (กาน้ำ 1.0 ลิตร) บีบปุ่มตรงกลางฝา (กาน้ำ 1.2 ลิตร) เปิดฝาโดยการดึงขึ้น (กาน้ำ 1.7 ลิตร)
2. เติมน้ำลงในกา ด้วยปริมาณที่ต้องการ (ต้องอยู่ระหว่างขีดแสดง Min และ Max)
3. ปิดฝาให้สนิท
4. นำกาน้ำวางบนฐานรอง และเสียบปลั๊กไฟ
5. เปิดสวิทช์การทำงาน สังเกตจะมีไฟสว่างขึ้น (กาน้ำ 1.0, 1.7 ลิตร)
6. เมื่อน้ำเดือด กาน้ำ จะตัดการทำงานโดยอัตโนมัติ

การดูแลรักษาและการทำความสะอาด

- ปิดสวิตช์และถอดปลั๊กไฟก่อนล้างทำความสะอาดทุกครั้ง
- ภายในของกาน้ำ ล้างทำความสะอาดด้วยน้ำสะอาด โดยใช้ฟองน้ำ และเช็ดให้แห้งทุกครั้ง
- ภายนอกของกาน้ำ หากมีความจำเป็นต้องทำความสะอาด ให้เช็ดด้วยผ้าชุบน้ำสะอาดบิดหมาดๆ และใช้ผ้าแห้งเช็ดให้แห้งทุกครั้ง
- แผ่นกรองที่พวยกา สามารถถอด และนำไปล้างทำความสะอาดได้
- ฐานรองเครื่อง หากมีความจำเป็นต้องทำความสะอาด ให้เช็ดด้วยผ้าชุบน้ำบิดหมาดๆ และใช้ผ้าแห้งเช็ดให้แห้งทุกครั้ง ห้าม นำไปจุ่มหรือแช่ในน้ำโดยเด็ดขาด

คำเตือนและข้อควรระวัง

ก่อนใช้งานควรอ่านคู่มือการใช้งานอย่างละเอียดเพื่อความปลอดภัย

1. ควรใช้เต้าเสียบที่ 220 - 240 V
2. ควรจับปลั๊กไฟให้แน่นขณะเสียบ หรือ ขณะดึงออกจากเต้าเสียบ (ไม่ควรดึงที่สายไฟ)
3. ควรเสียบปลั๊กไฟเข้ากับเต้ารับให้แน่น
4. ปิดสวิตช์และถอดปลั๊กหลังการใช้งานทุกครั้ง แล้วจึงยกกาน้ำออกจากฐานรอง
5. ควรเก็บกาน้ำ, ฐานรอง, ปลั๊กไฟ หรือ สายไฟ ให้พ้นจากแสงแดด, พื้นที่ที่มีความร้อน หรือ พื้นที่ที่มีความเปียกชื้น
6. ห้ามจับหรือถอดปลั๊กด้วยมือที่เปียกชื้น เพราะอาจเป็นสาเหตุให้ไฟฟ้าดูด และเกิดอันตรายต่อชีวิตได้
7. ห้ามเสียบปลั๊กกาน้ำร่วมกับเครื่องใช้ไฟฟ้าอื่นพร้อมกันหลายเครื่อง เพราะอาจจะเป็นสาเหตุให้ไฟฟ้าดูดได้
8. ห้ามใช้ปลั๊กไฟที่เสีย หลวม หรือชำรุด
9. ห้ามพับหรือหักงอสายปลั๊กไฟ
10. ห้ามเปิดฝากาน้ำ และ ห้ามยกกาน้ำออกจากฐานรอง ขณะต้มน้ำ
11. ห้ามเปิดสวิตช์ไฟใช้งาน ขณะน้ำแห้งหรือไม่มีน้ำภายในกาน้ำ
12. ห้ามใช้งานกาน้ำ โดยปราศจากฐานรอง
13. ห้ามนำตัวกาน้ำและฐานรอง ไปจุ่มน้ำหรือแช่น้ำโดยเด็ดขาด
14. ห้ามปล่อยให้เด็กใช้งานโดยปราศจากผู้ปกครอง หรือผู้มีประสบการณ์ในการใช้เครื่อง
15. หากกาน้ำเปียกขณะใช้งาน ควรรีบปิดสวิตช์และถอดปลั๊กไฟออกทันที
16. หากพบว่ากาน้ำ มีปัญหาให้หยุดการใช้งานทันทีและติดต่อศูนย์บริการลูกค้า ห้ามทำการซ่อมหรือ ดัดแปลงเอง

การรับประกัน (ดูรายละเอียดเพิ่มเติมในใบรับประกันสินค้า)

- รับประกัน 1 ปี นับจากวันที่ซื้อสินค้า และต้องส่งใบรับประกันส่วนของบริษัทฯ กลับคืนมายังบริษัทฯด้วย
- การรับประกันครอบคลุมเฉพาะกรณีที่เกิดจากความบกพร่องในการผลิต หรือ วัสดุชิ้นส่วนที่ไม่ได้มาตรฐาน โดยไม่ครอบคลุมถึงการใช้งานผิดประเภทหรือเกิดจากความประมาทในการใช้งาน รวมถึงความสึกหรอตามอายุการใช้งาน
- กรุณานำใบรับประกันสินค้าที่มีรายละเอียดสมบูรณ์มาแสดงทุกครั้งที่ติดต่อกับบริษัทฯ โดยทางบริษัทฯ จะขอยึดตามรายละเอียดความสมบูรณ์ของเอกสารการรับประกันเป็นสำคัญ

บริษัท ไทยสเตนเลสสตีล จำกัด 10 ซอยสุขุมวิท 61 ถนนสุขุมวิท แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110 โทรศัพท์ : 0-2730-7999 โทรสาร : 0-2730-7990

THAI STAINLESS STEEL CO.,LTD. 10 Soi Sukhumvit 61, Sukhumvit Road, Klongton-Nua, Vadhana, Bangkok 10110, Thailand Tel : +66 2730-7999 Fax : +66 2730-7990

http://www.seagull-brand.com e-mail : seagull@seagull-brand.com

Manual

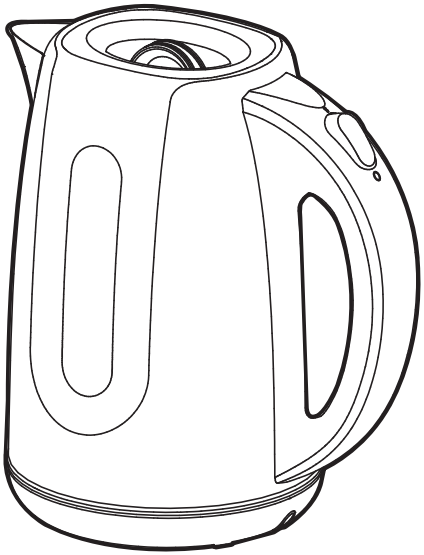

Electric Kettle

กาน้ำไฟฟ้า

Electric Kettles by Seagull are designed for easy and comfortable usage. Taking a short time for boiling water is appropriate for your modern life style.

Product Code	Product Name	Watt	Volt	Size W x L x H (cm)
150 000-6-47	Electric Kettle 1.0 L	1,370 - 1,630	220 - 240	14 x 20 x 21
150 000-6-69	Electric Kettle 1.2 L (Plastic Model)	900 - 1,100	220 - 240	14.5 x 19 x 21
150 000-6-22	Electric Kettle 1.7 L	1,850 - 2,200	220 - 240	15 x 22 x 23

Product Attributes

- Quick, Just 3-4 minutes for boiling water.
- Easy and comfortable, Just press 1 button for boiling water, and after boiling the machine will switch off automatically.
- The kettle body made from stainless steel, that is very aesthetic, durable, easy to clean and safe for boiling water. (for 1.0, 1.7 L Model)
- The kettle made from plastic (POLYPROPYLENE), that refractory and safe for boiling water. (for 1.2 L Model)
- 68 cm cable, can be rolled, easy for usage.
- Easy to see the water level inside and meantime for boiling, LED Light make you see the water level clearly (for 1.0, 1.7 L Model)
- The bottom of the kettle will not hot after boiling, so it is safe to move and place on the table or the other.
- Heater is under the kettle, easy for cleaning and safe for usage.
- Bakelite Handle, easy to hold and not hot even while boiling. (for 1.0, 1.7 L Model)
- Tightly close lid, makes you safe while boiling.
- Easy to open lid.

First usage

- For the first time of using the kettle, the water should be boiled in it twice with no additives.

Usage Instruction

1	2	3	4	5	6
			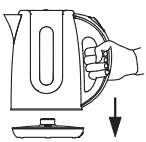	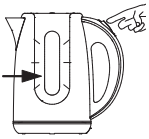	
Open the lid by pushing the button in the center of the lid. (For 1.0 L Model) Open the lid by squeezing the button in the center of the lid. (For 1.2 L Model) Open the lid by pulling up the lid.(For 1.7 L Model)	Fill the kettle with water, the water level must be between Max and Min Marks.	Close the lid tightly.	Place the kettle on the base and plug in.	Switch on , then the LED will showing. (for 1.0, 1.7 L Model)	After boiling, the kettle will switch off automatically.

Care and Cleaning

- Always remove the plug from the supply before cleaning.
- The inside of the kettle should be cleaned after every usage by using a sponge and the water without additives. And then, wipe with a dry cloth.
- The outside of the kettle should be cleaned, if necessary, by using a slightly damp cloth without additives. And then, wipe with a dry cloth.
- The calcium filter can be removed for cleaning.
- The base of the kettle should be cleaned, if necessary, with slightly damp cloth without additives, then wipe with a dry cloth. And do not immerse the base in the water.

Cautions

Please read the following instructions carefully before using this kettle for your own and properties safety.

1. Check your supply voltage before usage (220-240V), if you use the high or low voltage, it may cause short circuit and electric shock.
2. Plug and unplug carefully by holding the plug (not the cable).
3. Plug the unit to the wall socket tightly.
4. Always switch off and unplug the kettle after every usage. And then remove the kettle from the base.
5. Keep the kettle and the base with cable away from heat, direct sunlight and moisture.
6. Do not touch or unplug by wet hand to protect yourself from electric shock.
7. Do not plug the kettle with other appliances, it may cause short circuit and electric shock.
8. Do not use damaged or too loose or too tight plug to the wall socket, to avoid short circuit and fire.
9. Do not damage cable and plug, by hardly tear or pull the cable or plug.
10. Do not open the cover and move the kettle, while it is working to avoid splashing of hot water/steam that may cause danger and burn.
11. Do not switch on when the water dried or lower than minimum point.
12. Do not use the kettle without the base.
13. Do not immerse the kettle and the base in the water.
14. Do not let the children use the kettle alone, and they should be supervised to keep away from this appliance and forbid to play with it.
15. If the kettle become moist or wet while using, remove the main plug from the socket immediately.
16. If the kettle have a problem, please stop using and send the kettle to the company. The company will not response for every case, if the kettle are assembled or modified by others.

Warranty (Please see the detail in warranty certificate)

- 1 year warranty from the purchasing date, with the warranty form filled and return to the company. (office part)
- Warranty only covers manufacturing defect. Damage resulting from misuse, carelessness and worn part from usage will not be in the warranty.
- Bringing the warranty certificate every time when bringing the appliance in for service. The warranty document must be completed to receive services.

บริษัท ไทยสเตนเลสสตีล จำกัด 10 ซอยสุขุมวิท 61 ถนนสุขุมวิท แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110 โทรศัพท์ : 0-2730-7999 โทรสาร : 0-2730-7990

THAI STAINLESS STEEL CO.,LTD. 10 Soi Sukhumvit 61, Sukhumvit Road, Klongton-Nua, Vadhana, Bangkok 10110, Thailand Tel : +66 2730-7999 Fax : +66 2730-7990

http://www.seagull-brand.com e-mail : seagull@seagull-brand.com